

FRESH AIR OPERATION

Putting into operation

Clean the pre-filter on the explosion protection valve 1.17/1.5 according to the directions printed on it. Empty condensate reservoir 1.1 and reattach. Connect the hose fittings 1.9 according to the illustration.

Motor operation

Set throttle valve 1.6 to «CLOSED» and motor switch 1.2 to «I». Set the air flow with the throttle valve 1.6 on the air flow meter 1.15 to the **BLUE** mark.

Manual operation

Set throttle valve 1.6 to «OPEN». Remove the shaft guard cap. Lock the handle crank 1.7 into place. Turn the hand crank until the air flow meter 1.15 is set to the **BLUE** mark.

Note

The gas filter 1.11 and the hand lamp compartment for the emergency lighting 1.20 must remain sealed in peacetime.

FILTER OPERATION

Putting into operation

Clean the pre-filter on the explosion protection valve 1.17/1.5 according to the directions printed on it. Empty condensate reservoir 1.1 and reattach. Connect the hose fittings 1.9 according to the illustration.

Motor operation


Set throttle valve 1.6 to «CLOSED» and motor switch 1.2 to «I». Set the air flow with the throttle valve 1.6 on the air flow meter 1.15 to the **RED** mark.

Manual operation

Set throttle valve 1.6 to «OPEN. Remove the shaft guard cap. Lock the handle crank 1.7 into place. Turn the hand crank until the air flow meter 1.15 is set to the **RED** mark.

Note

The gas filter 1.11 and the hand lamp compartment for the emergency lighting 1.20 must remain sealed in peacetime.

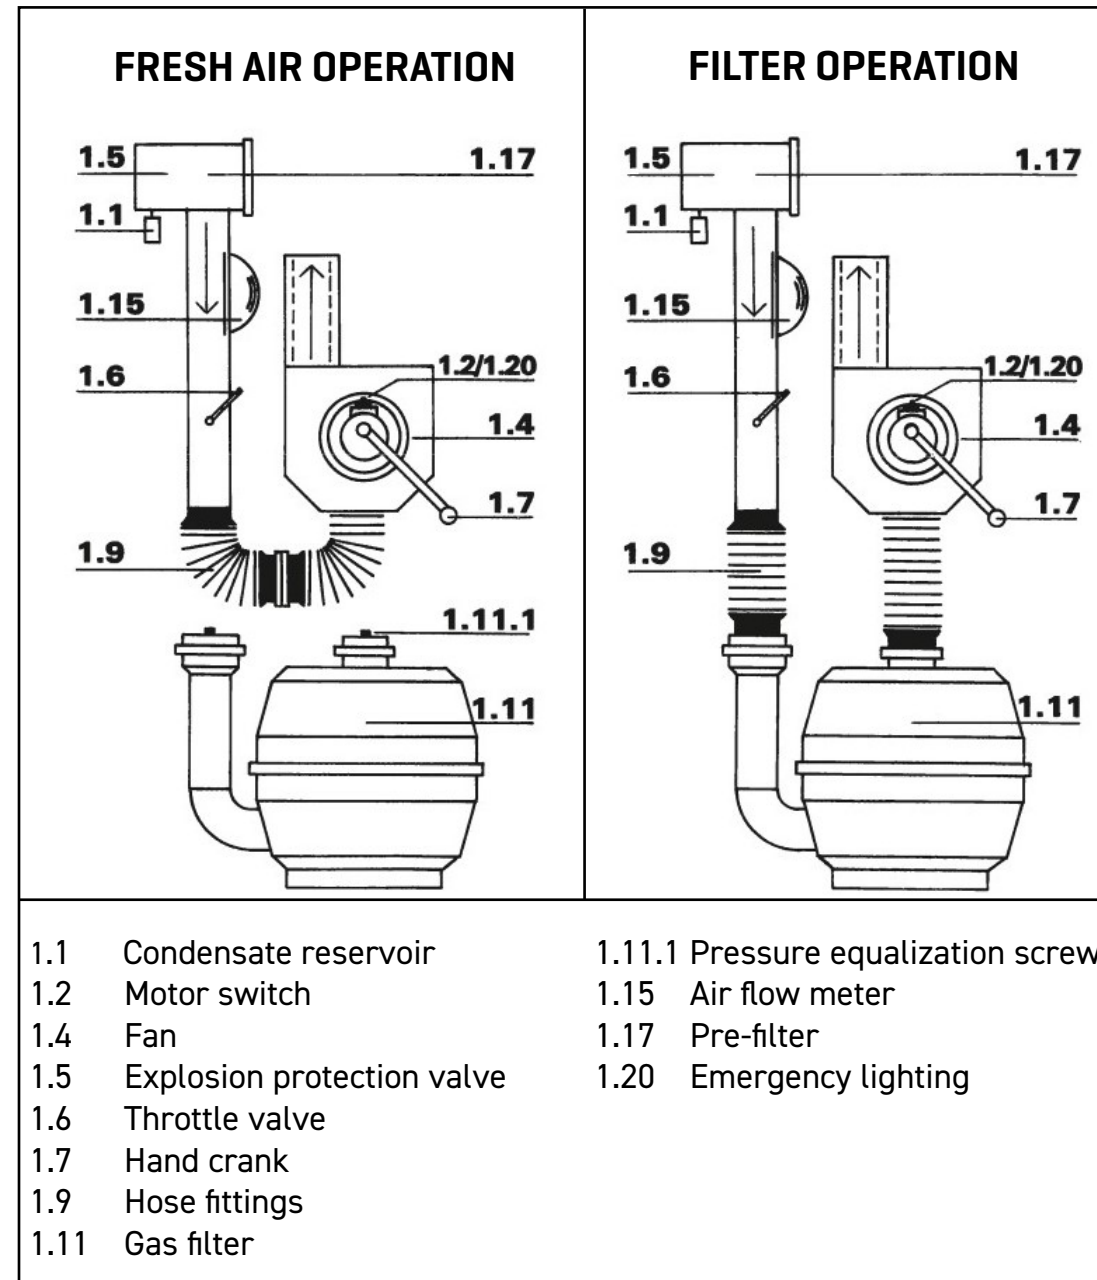

LUNOR G. KULL AG

Allmendstr. 127 | CH-8041 Zürich

+41 (0) 44 488 66 00

www.lunor.ch | info@lunor.ch

Lunor

SHELTERTECHNOLOGIES 